



Mains supply to driver must be OFF before connecting or disconnecting the fittings.

### 1. Mechanical Installation.

- i. Unscrew canopy anti-clockwise to remove.
- ii. If no rear access is available, secure in place using screws provided, running cables out the side of the monopoint.
- iii. If rear access is available, secure in place using screws provided.
- iv. Replace canopy by screwing clockwise to secure.

### 2. Electrical Installation.

- i. Mains supply to the driver must be OFF before and during connection and disconnection the fittings.
- ii. Multiple fittings on one circuit must be connected in series.
- iii. Do not use more than the stated number of fittings per driver.

### 3. Locking the luminaire in Pan and Tilt.

**NOTE** only adjust luminaire position when unlocked.



- i. Adjust luminaire to desired position, using angle gauge if required.
- ii. Lock luminaire position using 2mm Allen key provided.

## IMPORTANT SAFETY INFORMATION

READ ALL INSTRUCTIONS BEFORE USING THESE PRODUCTS. SAVE THESE INSTRUCTIONS FOR LATER REFERENCE.

1. Mains supply to driver must be OFF before connecting or disconnecting the fittings.
2. All systems must be installed by a suitably qualified professional only. Installations must conform to national installation and accident prevention regulations.
3. Do not install any fixture closer than 150mm from any combustible material. Do not install these systems in a damp or wet location.
4. To reduce the risk of fire and burns, do not install these systems where exposed bare conductors can be shorted or contact any conductive materials. Do not conceal or extend exposed conductors through a building wall.
5. Install only as described in this Precision Lighting manual. Appropriate fixings will need to be used depending on surface material at the installer's discretion.
6. Luminaires may be hot, allow to cool before touching.
7. All monopoints must be connected to an appropriate driver.
8. Regular cleaning of these products is important. Switch off at mains supply and allow to cool before touching. Clean fittings with a soft damp cloth and allow to dry before reconnecting power supply.

No Rear Access

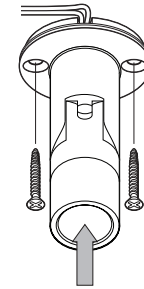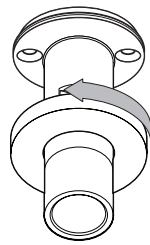

Rear Access

